SPIRAL CURLS HAIR STYLER

HS 6031

DE EN FR IT PT ES

SV NL PL CS TR EL

FOR A GOOD REASON

GRUNDIG

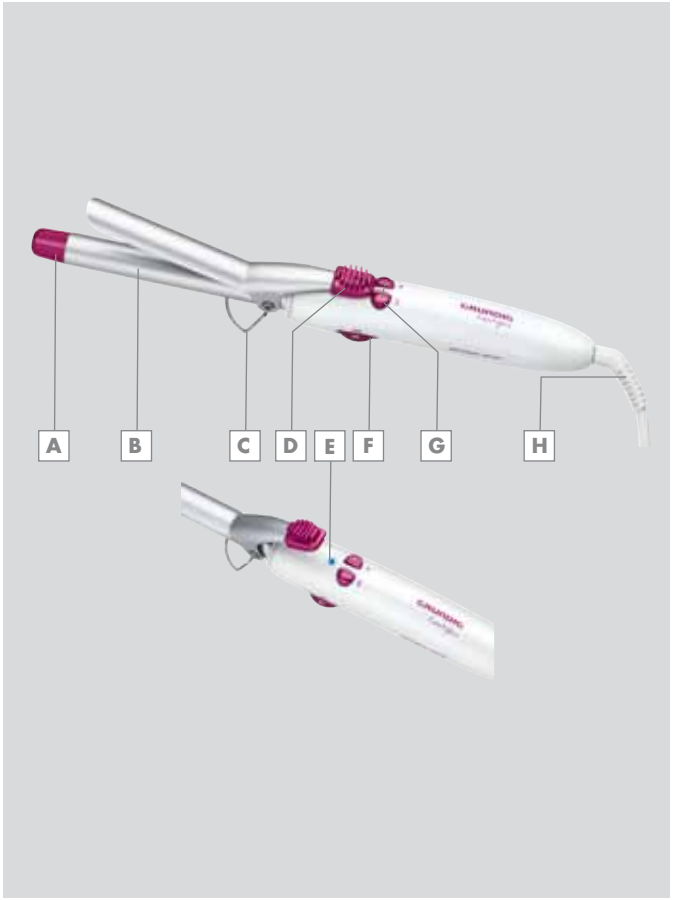
A
B
C
D
E
F
G
H

DEUTSCH 05-13

ENGLISH 14-21

FRANÇAIS 22-29

ITALIANO 30-38

PORTUGUÊS 39-46

ESPAÑOL 47-54

SVENSKA 55-62

NEDERLANDS 63-71

POLSKI 72-80

ČESKY 81-88

TÜRKÇE 89-96

ΕΛΛΗΝΙΚΑ 97-105

Please note the following instructions when using the appliance.

- Keep the instruction manual for future use. Should a third party be given the unit, please ensure the instruction manual is included.
- The appliance is designed for domestic use only.
- Never use the appliance in the bath, shower or over a wash basin filled with water; nor should it be operated with wet hands.

- Do not immerse the appliance in water or let it come into contact with water, even during cleaning.
- If the appliance is used in the bathroom, it is essential that you unplug it after use, as any water close to the appliance can still pose a hazard, even if the appliance is switched off.
- If not already in use, installing a residual current-operated protective device (RCD) is recommended for additional protection with a rated residual operating current not exceeding 30 mA in the electrical circuit of your bathroom. Ask your plumber for advice.
- Never cover the appliance, for example with a towel.
- Never place the appliance on soft cushions or blankets during operation.
- The appliance can become very hot. Do not keep your hair around the heating element for more than a few seconds.
- Do not allow the barrel to come into contact with your face, neck or head. Do not touch it with your bare hands.
- Unplug the appliance after use. Do not disconnect the plug by pulling on the cord. Place the appliance on a heat resistant surface and allow it to cool down.
- Never use the appliance if it or the power cord is visibly damaged.

- If the power cord is damaged, it must be replaced by the manufacturer, a service centre or a similarly qualified person to avoid any danger of electrical shock.
- Make sure that there is no danger that the power cord could be accidentally pulled or that someone could trip over it when the appliance is in use.
- Keep the appliance out of the reach of children.
- The appliance should not be used by the following people, including children: those with limited physical, sensory or mental capabilities and also those with a lack of experience and knowledge. This does not apply to the latter if they were instructed in the use of the appliance or if they use it under the supervision of a person responsible for their safety. Children should always be supervised to ensure that they do not play with the appliance.
- Do not leave the appliance unattended when switched on.
- Never open the appliance under any circumstance. No warranty claims are accepted for damage caused by improper handling.
- Check if the mains voltage on the type plate (on the handle of the appliance) corresponds to your local mains supply. The only way to disconnect the appliance from the mains is to unplug it.
- Never wrap the power cord around the appliance.
- Never use the appliance in or near to combustible, inflammable places and materials and furniture. Do not let the appliance come into contact with or become covered by inflammable materials e.g. curtains, textiles, etc. Please make sure that the appliance is always kept a safe distance away from flammable materials and furniture.
- Do not use paper, cardboard, plastic, inflammable, unprotected polished surfaces under the appliance.

OVERVIEW

Dear customer,

Congratulations on the purchase of your GRUNDIG HS 6031 Spiral Curls Hair Styler.

Read the following information carefully to ensure that you can use your high-quality GRUNDIG product for many years.

A responsible approach!

GRUNDIG focusses on contractually agreed social working conditions with fair wages for both internal employees and suppliers, as well as on the efficient use of raw materials with continual waste reduction of several tonnes of plastic each year – and availability of at least 5 years for all accessories.

For a future worth living.
For a good reason. Grundig.

Features

- Care and protection with its gentle ceramic coating with tourmaline and nano silver – for hydrated hair with more shine, bounce and care.
  - **Ceramic** ensures constantly high temperature and even heat distribution. The heat is distributed evenly to ensure hair is fully protected.
  - **Tourmaline** generates negative ions in a natural way, prevents frizz, static charging and preserves the natural moisture of the hair.
  - **Nano silver** inhibits bacteria build-up, constantly protecting and maintaining the surface of the plates – for healthy hair and hygienic styling plates.
- 19 mm instant heat curling tong.
- Adjustable temperature regulation from 140° C to 180° C.
- Fast electronic heating up time within 60 sec. to 100° C.
- Worldwide automatic voltage adjustment.

Controls

See the figure on page 3.

A Cool tip

B Curling wand with clip (ceramic-tourmaline-nano silver coating)

C Integrated product stand

D Lever (to open clip)

E Mode indicator

F Temperature setting wheel (markers between one and three dots).

G On/Off buttons

H Power cord with swivel joint

Styling curls

Your appliance conjures up glamorous curls and ringlets that are spectacularly springy and stay in a perfect shape.

Caution

- The heating element with clip becomes very hot. Do not touch with your hands.
- Do not allow the heating element to come into contact with your skin, face, neck or head.
- Set the appliance to the lowest temperature level the first time you use it. You can find the level which is suitable for your hair by incrementing the temperature level.

1 Place the appliance on a solid, flat, heat resistant surface.
Use the product stand.

2 Plug the power cord H into the wall socket.

3 Adjust the temperature level with the temperature setting wheel F.

Note

- There are 3 temperature levels which are shown with the markers on the temperature setting wheel. One dot shows the minimum and three dots show the maximum temperature level. The temperature can also be set between the dots.

4 Press and hold down On button G for 2 seconds to switch on the appliance.
- The mode indicator light E lights up blue and starts flashing until it reaches the set temperature.
- When the appliance has reached the desired temperature, the mode indicator light E stops flashing, meaning that it is ready to use.
- The mode indicator LED is also flashing when set temperature will be changed during operation until new set temperature (higher or lower) is reached.

5 Comb or brush out a section of your hair about 3 cm wide.

6 Press and hold down lever D. Place the end of the section of hair under the clip and release the lever D.

7 Wrap the section of hair around the curling wand with clip B towards your head.

8 After 5 to 10 seconds, press down lever D to open the clip and remove the curling wand from the hair.

Note

- Repeat the procedure section by section.

9 After use, switch the appliance off by pressing the Off button G for 2 seconds.
  – The mode indicator light E disappears.

10 Unplug the power cord H from the wall socket.

Now, your defined curls are ready – spectacularly springy and in a perfect, long lasting shape.

Notes

- The appliance can reach a temperature of 140° C up to a maximum temperature of 180 °C. It reaches 100° C approximately in 60 seconds.
- If the appliance is not used for a while after it is heated up, it automatically switches off after 60 minutes.
- Never leave the appliance unattended while it is plugged in.
- Allow the appliance to cool down in a safe place.

Cleaning and care

1 Turn the appliance off and unplug the power cord [H] from the wall socket.

2 Before cleaning, allow the appliance to cool down. The appliance can become very hot and may take up to 45 minutes to cool down.

3 Clean the appliance only with a soft damp cloth.

Caution

- Never put the appliance or power cord in water or any other liquid. Do not use any cleaning agents.

Note

- Before using the appliance after cleaning, dry all parts carefully using a dry soft towel.

Storage

- If you do not plan to use the appliance for a long period of time, please store it carefully.
- Make sure that it is unplugged, has completely cooled and is completely dry.
- Do not wrap the power cord around the appliance.
- Keep it in a cool, dry place.
- Make sure that the appliance is kept out of the reach of children.

Environmental note

This product has been manufactured with high quality parts and materials which can be reused and are suitable for recycling.

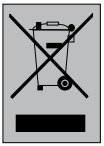

Therefore, do not dispose of the product with normal domestic waste at the end of its service life. Take it to a collection point for the recycling of electrical and electronic equipment. This is indicated by this symbol on the product, in the operating manual and on the packaging.

Please consult your local authorities to find out the location of the nearest collection point.

Help protect the environment by recycling used products.

Technical data

CE This product conforms to the European directives 2004/108/EC, 2006/95/EC and 2009/125/EC.

Power supply:
120 – 240 V~, 50/60 Hz

Power:
27 W

www.grundig.com
72011 908 2000 11/47

AUS GUTEM GRUND
GRUNDIG